

Thank you for purchasing the MFJ-1088 Dual Time LCD 12/24 hour clock. The MFJ-1088 has two independable clock modules. One module shows 12 hour display (local time) and the other module shows 24 hour display (UTC). Time setting on one module will not affect the other.

#### OPERATION PROCEDURE

**HOUR SET:** Press the SET button and the HOUR button at the same time to set the desired hour.

**MINUTE SET:** Press the SET button and the MINUTE button at the same time to set the desired minute. The seconds will reset to "00" each time the minute set is advanced. To synchronize the clocks, set the time one minute less than the desired time. Press the SET button on each clock at the same time. While holding in the SET buttons, press the MINUTE buttons on each clock simultaneously. Each clock will advance the next minute and the seconds will reset to "00".

**REPLACING THE BATTERY:** When the display is fading or losing contrast, the battery should be replaced. To replace the battery, simply rotate the battery door out in the direction indicated. Take out the old battery, put the new battery in with the positive sign viewing upward. Replace the battery door. Use 1.5V button cell, G12 or 386 battery.

